


## PRACTICAL USE STEPS FOR WINDING MACHINE

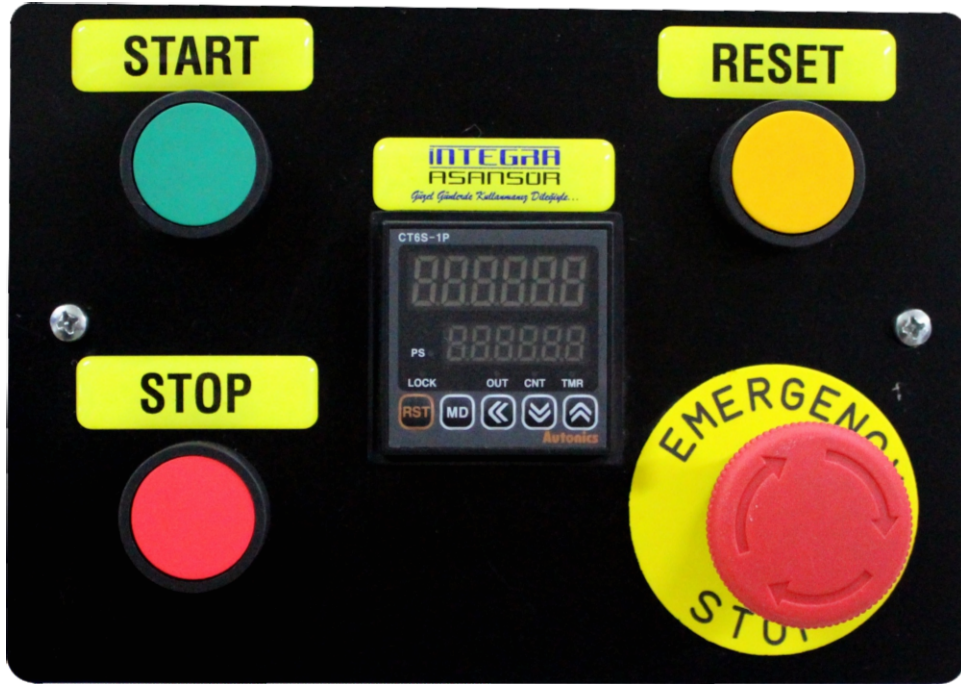

- Main Voltage: 220 VAC
- The screen becomes active with energizing.
- There are display and adjustment buttons on the control panel.
- There are start, stop, reset buttons around the screen and emergency stop button for urgent situations.
- You can enter the cut-to-size amount by using the direction buttons at the bottom of the screen. After the meter entry, you can complete the meter entry command by pressing the MD button.
- The machine stops automatically when it reaches the entered quantity.
- When the machine stops, you can cut your rope and easily remove your rope by removing the lock pin of the moving winding pulley and pulling the pulley arms to yourself.
- Do not operate the machine without installing the locking pin of the sliding winding pulley.
- Before starting the machine, make sure that the wheels are locked.
- It is suitable for measuring rope diameters between 6mm – 13mm.